

Digital system telephon ST 25

AGFEO
Telekommunikation

Conditions for use

The digital system telephone ST 25 is intended for connection to an internal ISDN bus of an AGFEO ISDN telecommunications system.

You can connect the digital system telephone ST 25 to the following AGFEO ISDN telecommunications system:

- ISDN telecommunications systems in the AGFEO Basic-Line AS 141, AS 191, software version 2.x or higher
- ISDN telecommunications systems in the AGFEO Business-Line AS 32, AS 33, AS 34, software 3.x or higher
- ISDN telecommunications systems in the AGFEO Profi-Line AS 40, software version 2.x or higher

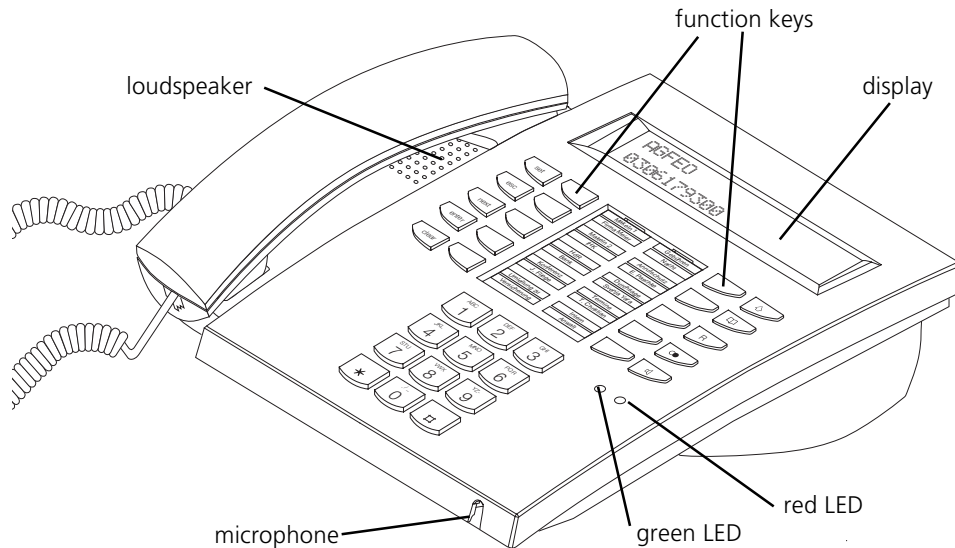 
The digital system telephone ST 25 must not be connected to an ISDN interface of a public telecommunications network.

AGFEO GmbH & CO. KG cannot be held liable for damage resulting from use of the digital system telephone ST 25 that is not in accordance with its intended purpose.

Safety notes

- During a thunderstorm, you must not connect or disconnect the digital system telephone's connecting lead.
- Lay the digital system telephone's connecting lead in such a way that no-one can step on it or stumble over it.
- Make sure that no liquids penetrate into the interior of the digital system telephone. This may result in short-circuits.

Digital system telephone ST 25



1 ... 0 **Dialling key pad** - For dialling a number and entering data

*****, **#** **# and * keys**

set **Set key** - for initiating and ending programming

esc **esc key** - for clearing a connection or for cancelling programming mode

next **next key** - for scrolling further in the display in the event of different functions

enter **enter key** - for confirming inputs

clear **clear key** - for clearing a display or data

↑ **shift key** - to use the second level of function keys

📖 **Telephone directory key** - to call up the telephone directory

R **Inquiry key** - for inquiries and brokering

🔄 **Redial key** - for dialling the number dialled last

🔊 **Loudspeaker key** - for activating the loudspeaker and switching to hands free mode. You can alter the function by programming.

📁 **10 function keys** - default settings on delivery. You can modify the functions by programming

🔴 **Red LED** - Flashes in the event of an appointment call and an entry in the call list; lights up when do not disturb is on.

🟢 **Green LED** - Flashes when hands free mode is on.

Setting up and cleaning the digital system telephones, inserting the marking strips

Location

Place the digital system telephone in a suitable location. Pay attention to the following points:

- Do not install them where they may be splashed by water or chemicals.
- Plastic feet of the telephones:
Your unit was produced for normal conditions of use. The plastic feet of the telephone may be detrimentally influenced by chemicals that are used to produce fur-

niture or which are used in the production of care agents. In certain circumstances, the feet of the telephones altered by external influences may leave nasty traces. Understandably, we cannot assume any liability for such damage. Therefore, use a slip-proof support surface for your telephones, particularly on new furniture or on furniture that has been treated with care agents.

Cleaning

You can clean your digital system telephone easily. Pay attention to the following points:

- Wipe the telephone with a slightly moist cloth or use an anti-static cloth.
- Never use a dry cloth (charges may

produce defects in the electronic circuitries).

- In any case, make sure that moisture does not penetrate into the interior (switches and contacts may be damaged).

Inserting the marking strips of the function keys

Press on the plexiglass at the bottom.

Push the glass down.

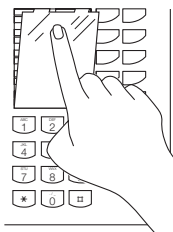 
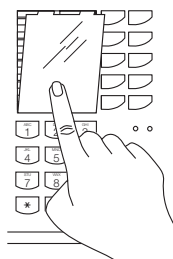 
The glass springs out at the top and can be removed.

Insert the marking strips that you have filled out according to the chosen key assignments

Insert the plexiglass in the right direction (wide lug pointing downwards).

Insert the plexiglass at the bottom.

Press down the plexiglass at the top and push it up until it engages.



Commissioning

Connecting the digital system telephone

To commission the digital system telephone, insert the Western plug of the ISDN connecting cable into an IAE/UAE socket of your AGFEO ISDN telecommunications system's internal ISDN bus.

- Press the Western plug into the ISDN socket until it audibly latches.

- To remove the ISDN connecting cable, press (if necessary using a small screwdriver) the latching hook of the Western plug in the direction of the plug's housing and simultaneously pull the plug out by the cable.

Registering the digital system telephone's internal telephone number

Two digital system telephones can be connected to every internal ISDN bus (internal S0 bus) of an AGFEO ISDN telecommunications system (see Page 1).

During configuration of the telecommunications system, a primary internal telephone number, and possibly a secondary internal telephone number, from

the number repertoire of the telecommunications system is assigned to each digital telephone, just like any other terminal.

You must register the digital system telephone when you connect it to the telecommunications system for the first time.

This message appears briefly when you connect the digital system telephone ST 25 for the first time.

```
ST 25 digital
Registering
```

The assigned primary internal telephone numbers of the two digital system telephones, e.g. 13 and 14, are then displayed.

```
ST 25 digital
Slot 1 >13<14
```

next

Press "next" to select the next internal telephone number, e.g. >14<

```
ST 25 digital
Slot 1 13>14<
```

enter

Press "enter" to register the digital telephone under the marked internal telephone number. The display goes off briefly and then this message briefly appears.

```
ST 25 digital
Registering
```

The standard display is then shown. The digital system telephone is registered and is ready for operation.

```
----- 11:52
19.March 1998
```

Notes

If it should be necessary to change the internal telephone number allocations, you can initiate the above registration function by entering .

If you unplug a registered digital system telephone from the internal S0 bus and

connect it to the same internal S0 bus (slot) later on again, you do not need to register it again.

You must register the digital telephone again if you connect it to a different internal S0 bus.

Operating the digital system telephone

You operate the digital system telephone ST 25 in the same way as the analog system telephone ST 20.

Operation of the system telephone ST 20 (ST 25) is described in the operating instructions of your AGFEO ISDN telecommunications

system, in Chapter entitled "Operation - systems telephones". You can also consult your telecommunications system's "short-form operating instructions for system telephones".

Both system telephones' displays are identical.

Headset

The digital system telephone ST 25 features a separate terminal (Western socket) for a headset. Recommended headset models: (obtainable via specialist dealers)

Manufacturer	Model		Order No.
Plantronics	Supra Monaural Polaris	Modell P51	32190-04
	Tristar	Modell H81	33695-01
	with connecting cable	U10P	38058-01
GN Nordkom	Profile monaural		1861-15-03
	Optima NC monaural		1913-29-01
	with connecting cable		8800-00-01

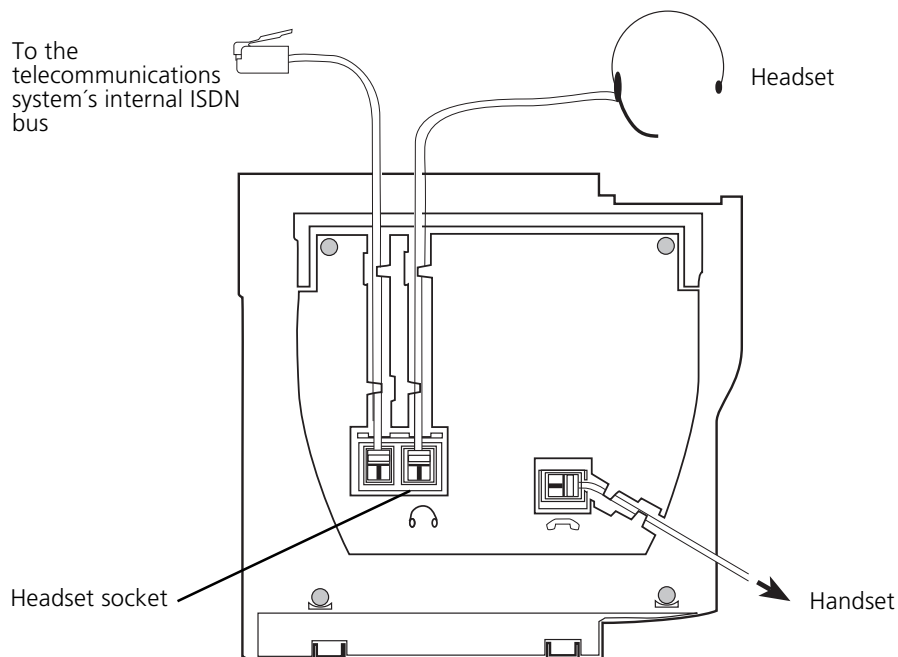 
Connecting the headset

The Western socket for headset connection is located on the underside of the digital system telephone. The socket features the headset symbol.

- Press the headset's plug into the headset socket until it engages audibly.
- For pull relief, lay the headset's cable in the

cable duct on the underside of the digital system telephone.

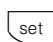 

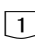 
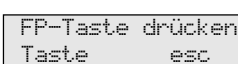

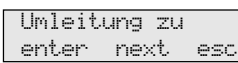

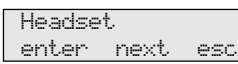


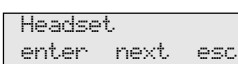
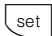 
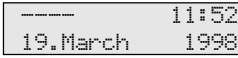
- To release the headset cable, press (if necessary using a small screwdriver) the latching hook of the Western plug in the direction of the plug's housing and simultaneously pull out the plug by the cable.






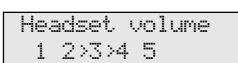

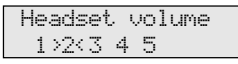
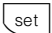 
Terminals on the underside of the digital system telephone ST 25

Setting up the „Headset“ function key

If you wish to use a headset to make telephone calls, you must program a freely programmable function key on your digital system telephone as the „Headset“ function key.

  	"set 31": initiate programming.	
	Press the function key whose function you wish to modify (if necessary, press the "Shift" key for the second level beforehand). The current function is displayed.	
	With the "next" key, scroll down until the "Headset" function is displayed.	
 	or with the "Shift" and "next" keys, scroll up until the required function is displayed.	
	"set": end programming. The "Headset" function key is configured.	

Setting the headset volume

  	Enter "set 26" to set the headset volume. The current setting is marked.	
	Enter a digit for the new setting, e.g. "2" Meanings: 1 - very low 5 - very high	
	Conclude programming.	

Making telephone calls with the headset

You can use a headset instead of the digital system telephone's handset to make telephone calls. Instead of „lift the receiver“ and „replace the receiver“, press the „Headset“ function key instead.

Example - accepting a call
Your telephone rings.

- Press the „Headset“ to accept the call

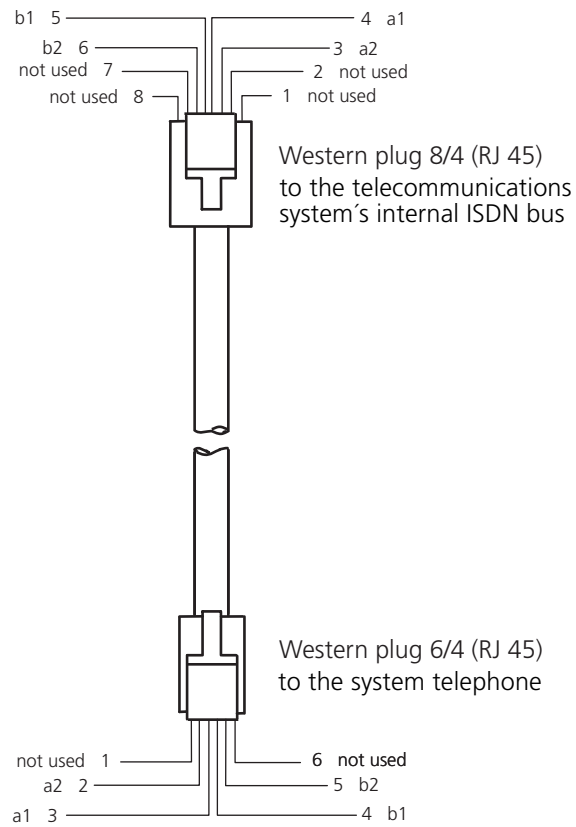 
- Conduct the conversation
- Press the „Headset“ key to end the conversation.

You can also use the digital system telephone's

- preparing dialing
- on hook dialing
- open listening

functions in conjunction with the headset.

ISDN connecting cable ST 25 - pin assignments



This unit meets the requirements of the EU guideline:
 73/23/EWG Low voltage equipment
 89/336/EWG Electromagnetic compatibility
 To this end, the system telephone bears the CE mark.

Ident.No. 533 920
 Modifications and errors reserved.
 Printed in Germany
 0987
 8

AGFEO GmbH & Co. KG
 Gaswerkstr. 8
 D-33647 Bielefeld
 Internet: <http://www.agfeo.de>